

BLOWSION HOOD STRAP KIT



EQUIPMENT NEEDED

- Drill
- Stainless screws

MOUNTING LOCATIONS

Every model of watercraft is different, but the concept is the same. Most installation locations are a matter of personal preference. Suggested locations are:

- **Super Jets (all years):** use one of the existing bolts that hold the front hood hooks in place.
- **750 SXI & Pro:** existing bolts in the handlepole bracket area can be utilized, or additional holes can be drilled.
- **FX1:** riveting the front straps in place is the preferred method.
- **SXR 800:** use one of the existing bolts that hold the front hood hooks in place, or drill and tap the spring tensioner.

INSTALLATION


- 1 **Locate where the straps will be mounted** at the front of the ski (see Mounting Locations above). Personal preference takes precedence, but the standard method is to attach the longer end of the strap at the front.
- 2 **Mount the rear straps** using the existing electrical box bolts, or drill new holes and mount the same way as the front. See the installation examples below for various alternatives.
- 3 **Install the hood** and buckle the straps securely.
- 4 **Adjust for tightness.** Excess strap material can be cut off if desired. It is recommended to melt the cut edge with a heat source to prevent fraying.

INSTALLATION EXAMPLES


The photos below show various mounting alternatives across different watercraft models.



SXR 800: JSU Racing bracket

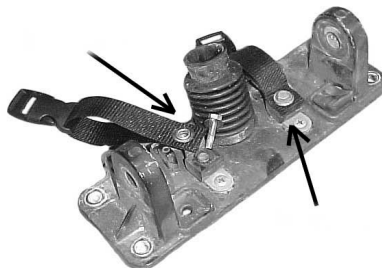

SXR 800 Bracket

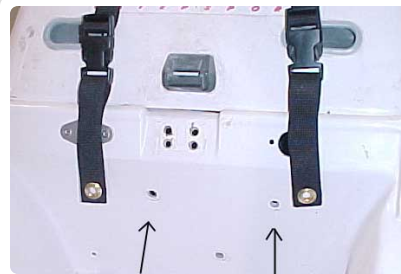


Strap install location



SXR 800: JSU Racing bracket



Hood Straps Installed

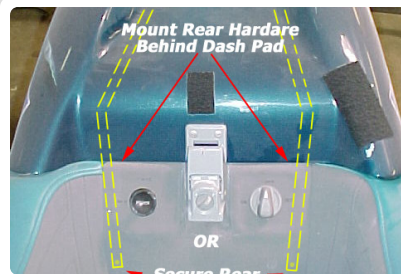


Rear hardware: dash pad mounting



SXR 800: JSU Racing bracket



Hood Straps installed

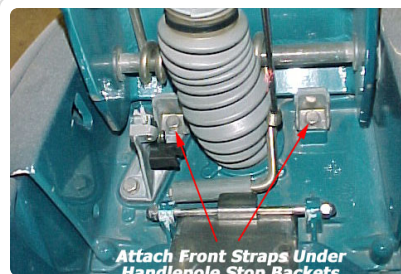

Front straps under handlepole stop brackets



Rickter installed kit



Front strap: attach points

BUYER ACCEPTS ALL RESPONSIBILITY FOR POSSIBLE DAMAGE INFLICTED DURING INSTALLATION OF THIS PRODUCT. THESE INSTRUCTIONS ARE PROVIDED AS A GUIDELINE FOR EXPERIENCED USERS OF THE TOOLS AND MATERIALS NECESSARY TO COMPLETE THE INSTALLATION OF THIS PRODUCT. INEXPERIENCED INSTALLERS MAY WISH TO SEEK THE ASSISTANCE OF A QUALIFIED PERSON BEFORE CUTTING HOLES INTO THEIR WATERCRAFT. THE MANUFACTURERS OR DISTRIBUTORS OF BLOWSION FREESTYLE PRODUCTS CANNOT BE HELD RESPONSIBLE FOR ANY INJURY RESULTING FROM THE USE, MISUSE OR IMPROPER APPLICATION OF THIS PRODUCT. ALWAYS RIDE SAFELY.

Installation questions? Contact your dealer or Blowsion support.

ADDRESS

Blowsion LLC
13921 SW Industry Lane, Suite 120
Sherwood, Oregon 97140 · USA

BUSINESS HOURS

9:00am – 5:00pm PST
Monday – Friday

CONTACT

Phone: 503-625-3616
Email: info@blowsion.com
Web: blowsion.com