

BLOWSION HANDLEPOLE LIMITING ROPE

INSTALLATION

- 1 Remove the handlepole chin pad** for easier installation.
- 2 Attach the bottom connection** by running the provided loop through the hood latch (see Figure 1). Some grinding of the backside of the OEM latch may be required for proper fitment.
- 3 Mount the retaining clip** as shown in Figure 2. The "eye" should be on the underside of the turn plate.
- 4 Complete the installation** by hooking the free end of the bungee cord to the base of the handlepole into the factory drain hole, handlepole spring, or mounting bracket.

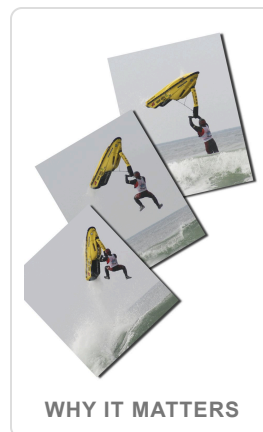
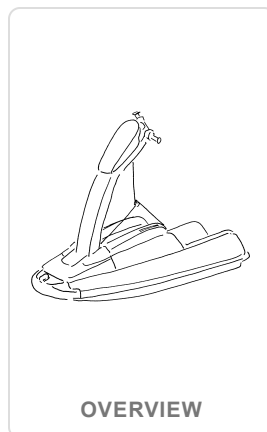


FIGURE 1



FIGURE 2

BUYER ACCEPTS ALL RESPONSIBILITY FOR POSSIBLE DAMAGE INFLICTED DURING INSTALLATION OF THIS PRODUCT. THESE INSTRUCTIONS ARE PROVIDED AS A GUIDELINE FOR EXPERIENCED USERS OF THE TOOLS AND MATERIALS NECESSARY TO COMPLETE THE INSTALLATION OF THIS PRODUCT. INEXPERIENCED INSTALLERS MAY WISH TO SEEK THE ASSISTANCE OF A QUALIFIED PERSON BEFORE CUTTING HOLES INTO THEIR WATERCRAFT. THE MANUFACTURERS OR DISTRIBUTORS OF BLOWSION FREESTYLE PRODUCTS CANNOT BE HELD RESPONSIBLE FOR ANY INJURY RESULTING FROM THE USE, MISUSE OR IMPROPER APPLICATION OF THIS PRODUCT. ALWAYS RIDE SAFELY.

Installation questions? Contact your dealer or Blowsion support.

ADDRESS

Blowsion LLC
13921 SW Industry Lane, Suite 120
Sherwood, Oregon 97140 · USA

BUSINESS HOURS

9:00am – 5:00pm PST
Monday – Friday

CONTACT

Phone: 503-625-3616
Email: info@blowsion.com
Web: blowsion.com