

WORX RACING WORX COMPONENTS

Pty Ltd A.C.N. 073 435 033

1/12 Ereton Drive Labrador Queensland Australia 4215

Phone: 61 7 5537 7181 Fax: 61 7 5537 7381

INSTALLATION INSTRUCTIONS

**PART NUMBER: WR 528 : WORX RACE SPONSONS
KAWASAKI SX-R 800**

**IMPORTANT: READ ALL INSTRUCTIONS BEFORE PROCEEDING WITH
INSTALLATION**


Tools required for installation:

Electric drill
3/16" drill bit
Blue Loctite

Parts Supplied

2 x Worx Sponsons
8 x 3/16" x 1" Allen head bolts
8 x 3/16" x 5/8" Flat Washers
1 x Allen Key

1. Using the electric drill with the 3/16" drill bit drill out the rear four rivets holding on the side and rear mouldings, clean out the holes in the hull.
2. Fit the Worx sponsons using the 8 x 3/16" x 1 Allen head bolts and the flat washers, apply a small amount of the blue loctite to each bolt. Be careful to start all of the bolts into the sponsons before you tighten using the Allen key supplied

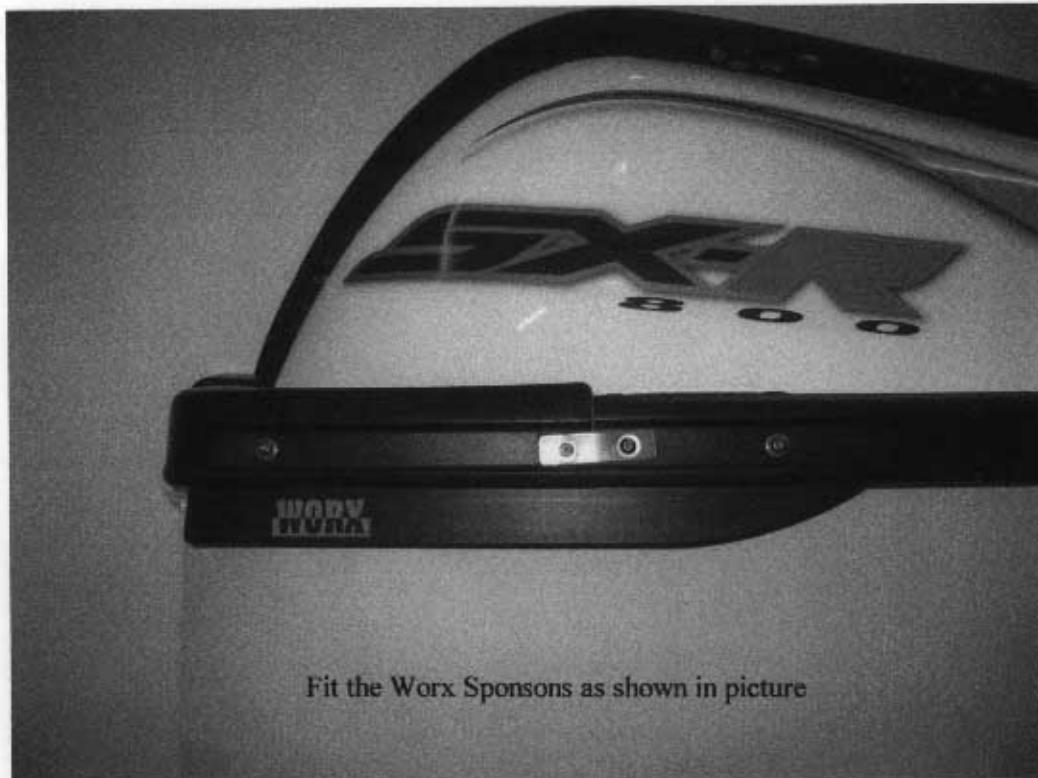

Fit the Worx Sponsons as shown in picture

Continued on back :

Warning: These sponsons will vastly improve the turning capability of your boat take time to get used to them before you attempt any hard cornering

Thank you for purchasing **Worx Racing components** products. We firmly believe that **Worx Racing Components** products are among the finest watercraft parts available.

A great deal of time and effort has gone into the design and development of this product to ensure that it will perform to the highest standard and that installation is a relatively straight forward and simple procedure.

If you have any questions or comments on the performance and/or installation of our products please contact us at the numbers listed on page one or through your local **Worx** dealer.

“DON’T SETTLE FOR SECOND BEST”

RIDE SAFLEY, PROTECT OUR ENVIROMENT
AND RESPECT OTHERS WHO SHARE OUR WATERWAYS